


BA 189

$\frac{7}{8} \times 1\frac{1}{2}$


American 18th Century

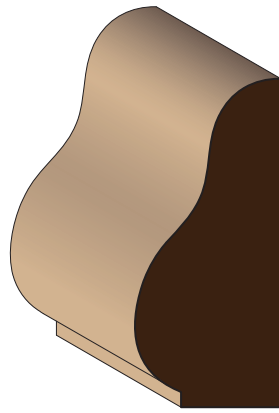

BA 33

$\frac{3}{4} \times 1\frac{3}{4}$


American Depression Era

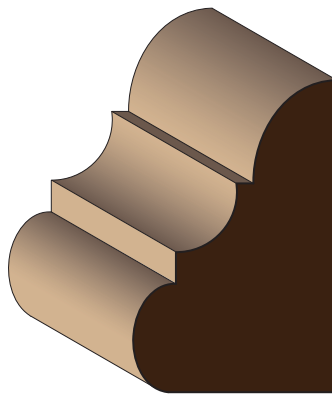

BA 219

$1\frac{1}{16} \times 1\frac{5}{8}$


American Late
19th Century

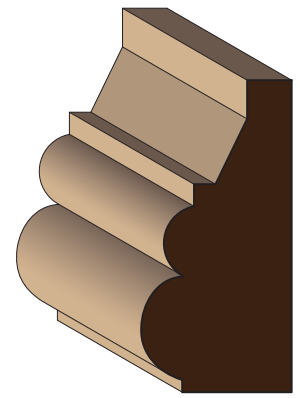

BA 17

$\frac{13}{16} \times 1\frac{5}{8}$


American WWI Era

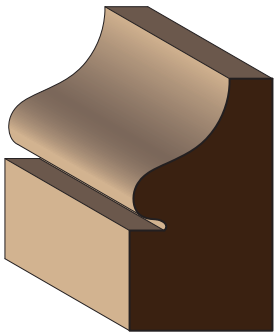

PA 39

$\frac{3}{4} \times 1\frac{5}{16}$


American Late
19th Century

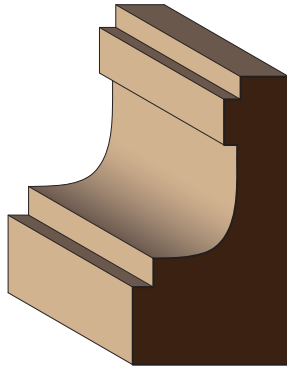

PA 62


$1\frac{3}{16} \times 1\frac{1}{2}$

American 19th Century

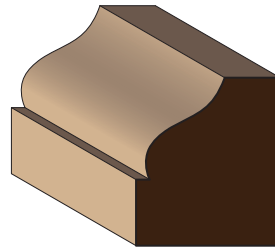


BA 11

$\frac{3}{4} \times \frac{7}{8}$

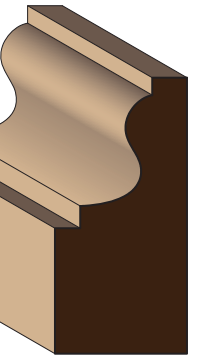

PA 27


$1\frac{1}{16} \times 1\frac{7}{16}$

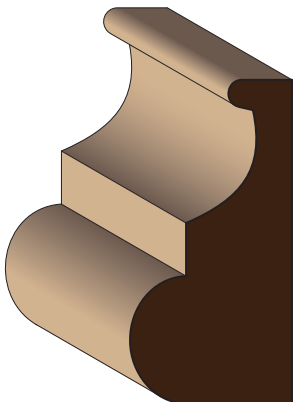

BA 180

$1\frac{11}{16} \times \frac{7}{8}$


American Victorian

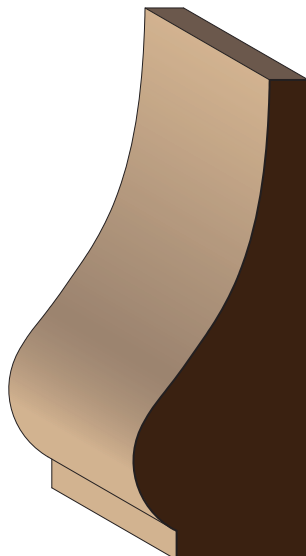

PA 182

$\frac{7}{8} \times 2\frac{1}{2}$


American Victorian

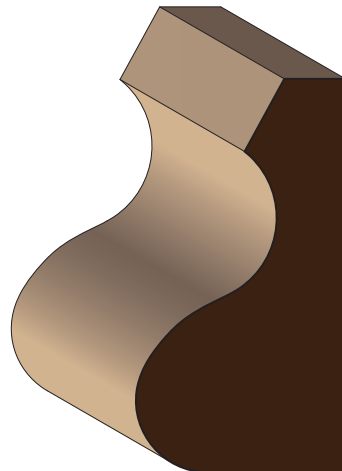

BA 93

$1\frac{1}{8} \times 2\frac{1}{8}$

American Victorian

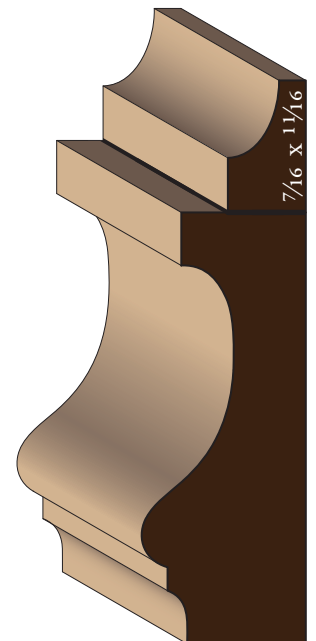

BA 269

$\frac{7}{8} \times 2\frac{5}{16}$

American Late
19th Century